

 

 

 

 

 

 

 

 

 

 

 

 

 
 


 













Original	Replacement
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Back / Return
	 Mute / Dimmer
	 Smart / List
	 Vol+

Original	Replacement
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Display / Media
	 Menu / Home
	 Shift + 0
	 Setup / OPT /
	 Info / Angle
	 Shift + Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	P.Mode		Picture / Format
	P.Size		Zoom / Size
	SRS		Sound / Title
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+

