 

 

 



 

 

 



 



 

 









 



 



 

 

 

 

 

 





 

 
 
 


 








 



 



 

 

 

 



 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 CH-List	 Display / Media
 3	 3	 Menu	 Menu / Home
 4	 4	 FAV-CH	 Fav / Marker / PC
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Info	 Info / Angle
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Alarm	 Smart / List	 Left	 Left
 Pre-CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Enter	 OK
 Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	TXT/MIX	 Text / Goto		
	SRS	 Picture / Format		
	P.Size	 Zoom / Size		
	Dual/I/II	 Audio / Lang I/II		
	Guide	 Guide / EPG / -/--		
	SUBT.	 Subtitle / EQ		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

