

 



 

 



 







 

 



 

 

 

 

 

 



 

 

 

 

 

 

 

 

 

 

 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 >>I	 >>I / Preset+
 Power USB/Audio	 Smart / List	 >>I CD/FM	 Right
 Open/Close	 Eject / Surround	 OK USB/Audio	 5
 Power CD/FM	 Shift + Power	 OK	 OK
 CD/FM	 3	 OK CD/FM	 Shift + OK
 Dock	 Green / APP / Repeat	 Play USB/Audio In	 Shift + Play /
 USB/Audio In	 8	 Play/Pause CD/FM	 Pause / Step / Freeze
 Preset/Album Up USB/Audio In	 CH+ / Page+	 Play/Pause	 Play / Slow
 Preset/Album Up	 Up	 Vol+	 Vol+
 Preset/Album Up CD/FM	 Shift + Up	 Vol-	 Vol-
 Preset/Album Down USB/Audio	 CH- / Page-	 Menu USB/Audio	 Shift + Display / Media
 Preset/Album Down	 Down	 Menu Stop USB/Audio In	 >> / Tune+
 Preset/Album Down CD/FM	 Shift + Down	 Menu Stop CD/FM	 Shift + Stop /
 I<< USB/Audio In	 Shift + I<< / Preset-	 Menu CD/FM	 D.Menu / Top
 I<<	 I<< / Preset-	 Menu Stop	 Stop / Hold
 I<< CD/FM	 Left	 Menu	 Menu / Home
 >>I USB/Audio In	 Shift + >>I / Preset+	 Display	 Display / Media





Original	Replacement
 Display CD/FM	 Picture / Format
 Display USB/Audio In	 Info / Angle
 Mute	 Mute / Dimmer
 Repeat Shuffle CD/FM	 AV / Input / RDS
 Repeat/Shuffle	 << / Tune-
 Repeat/Shuffle USB/Audio In	 Back / Return
 Prog CD/FM	 Setup / OPT /
 Prog	 Text / Goto
 Prog USB/Audio In	 Exit / Cancel / Clear
 Sound	 Sound / Title
 Clock	 Blue / Prime Video / Random
 Sleep/Timer	 Sleep / Timer

Original	Replacement

