

 

























 



 

 

 

 

 





 





 

 

 

 

 

 

 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 DVD/Media	 Shift + Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-
 0/10	 0
 Goto	 Text / Goto
 CH-	 CH- / Preset-
 CH-	 CH- / Page-

Original	Replacement
 >>	 >> / Preset+
 CH+	 CH+ / Page+
 <</FF-	 << / Tune-
 >>/FF+	 >> / Tune+
 Prog	 TV/Radio /
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 Source	 AV / Input / RDS
 Play/Pause	 Play / Slow
 Function	 Setup / OPT /
 Menu	 Menu / Home
 Title	 Shift + Sound / Title
 Setup	 D.Menu / Top
 PBC	 Back / Return
 Up	 Up
 Down	 Down





Original	Replacement
	Left
	Right
	OK
	Picture / Format
	Red / Netflix / Search
	Audio / Lang I/II
	Green / APP / Repeat
	Subtitle / EQ
	Info / Angle
	Shift + Play /
	Yellow / YouTube / Repeat
	Rec / Rec Mode
	Zoom / Size
	Pause / Step / Freeze
	Shift + Back / Return
	Sleep / Timer
	Sound / Title

Original	Replacement
	Display / Media
	Shift + Setup / OPT / Tools

