



Original	Replacement	Original	Replacement
Mode	Power	Subtitle	Subtitle / EQ
EPG/OSD	Guide / EPG / -/--	Zoom/Exit	Exit / Cancel / Clear
Tv/Musci/Repea	TV/Radio /	Mute	Mute / Dimmer
PIC	Picture / Format	I<<	I<< / Preset-
1	1	I<<	Shift + I<< / Preset-
2	2	>>I	Shift + >>I / Preset+
3	3	>>I	>>I / Preset+
4	4	CH-	CH- / Page-
5	5	<<	Shift + << /
6	6	<<	<< / Tune-
7	7	CH+	CH+ / Page+
8	8	>>	Shift + >> /
9	9	>>	>> / Tune+
0	0	Enter	OK
Title/Favorite PR	Sound / Title	Angle/Teletext	Text / Goto
Menu/Memory	Menu / Home	Slow/Guide	Shift + Play /
Setup	Setup / OPT /	Audio	Audio / Lang I/II





Original	Replacement	Original	Replacement
 Play/Pause	 Play / Slow		
 Stop/PR List	 Stop / Hold		
 PG Up/Info	 Up		
 PG DN/Sleep	 Down		

Original	Replacement

