











 



 












 
 



 



 



 



 



 



 



 



 



 
 




Original	Replacement	Original	Replacement
	Power		Power
	HDD/Music Collection		Red / Netflix / Search
	DVD		Shift + 2
	Tuner		Shift + 6
	Power Tv		Shift + Power
	TV/AV Tv		Shift + AV / Input / RDS
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit / Cancel / Clear
	+10/-/--		Guide / EPG / -/--
	Select >		CH+ / Page+
	< Select		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow Search		<< / Tune-
	Slow Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Menu/Play List		Menu / Home
	Functions		Info / Angle
	Sub Menu		Subtitle / EQ





Original	Replacement
Return	Back / Return
Top Menu/Disc Navigator	Smart / List
One Touch Play	Display / Media
Start	AV / Input / RDS
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
Play Energetic	Shift + 1
Play Mellow	Shift + Play /
Play Relaxing	Shift + 3
Play Emotional	Shift + 4
HDD Rec	Rec / Rec Mode
CH Select	Picture / Format
REG/Favourite	Fav / Marker / PC
Quick OSD	Text / Goto

Original	Replacement
Play Mode	Zoom / Size
FL Display	TV/Radio /
Sleep	Sleep / Timer
[ I ]VS	Shift + TV/Radio / Program
Setup	Setup / OPT /
Sound	Sound / Title
Select	Shift + OK
Muting	Mute / Dimmer

