











 



 












 
 



 



 



 



 



 



 



 



 



 
 


 

 

 

 

 

 
 

 
 



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	HDD/Music Collection		Red / Netflix / Search		Cancel		Exit / Cancel / Clear
	DVD		Shift + 2		+10/-/--		Guide / EPG / -/--
	Tuner		Shift + 6		Select >		CH+ / Page+
	Power Tv		Shift + Power		< Select		CH- / Page-
	TV/AV Tv		Shift + AV / Input / RDS		Vol+		Vol+
	Vol+ Tv		Shift + Right		Vol-		Vol-
	Vol- Tv		Shift + Left		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<< Slow Search		<< / Tune-
	3		3		Slow Search >>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		Play		Play / Slow
	7		7		Menu/Play List		Menu / Home
	8		8		Functions		Info / Angle
	9		9		Sub Menu		Subtitle / EQ





Original	Replacement
 Return	 Back / Return
 Top Menu/Disc Navigator	 Smart / List
 One Touch Play	 Display / Media
 Start	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Play Energetic	 Shift + 1
 Play Mellow	 Shift + Play /
 Play Relaxing	 Shift + 3
 Play Emotional	 Shift + 4
 HDD Rec	 Rec / Rec Mode
 CH Select	 Picture / Format
 REG/Favourite	 Fav / Marker / PC
 Quick OSD	 Text / Goto

Original	Replacement
 Play Mode	 Zoom / Size
 FL Display	 TV/Radio /
 Sleep	 Sleep / Timer
 [ I ]VS	 Shift + TV/Radio / Program
 Setup	 Setup / OPT /
 Sound	 Sound / Title
 Select	 Shift + OK
 Muting	 Mute / Dimmer

