

 







 



 

 

 

 

















Original	Replacement
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Back / Return
	 Mute / Dimmer
	 Shift + Smart / List
	 Vol+

Original	Replacement
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Menu / Home
	 Smart / List
	 Guide / EPG / -/-
	 Setup / OPT /
	 Info / Angle
	 Shift + Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	E-Manual TV/Radio /		
	3D Zoom / Size		
	AD/Subt. Subtitle / EQ		
	Stop Stop / Hold		
	<</ << << / Tune-		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	>>/>> >> / Tune+		

