

 







 



 

 

 

 




















 

 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE-CH	 Back / Return
 Mute	 Mute / Dimmer
 CH List	 Shift + Smart / List
 Vol+	 Vol+

Original	Replacement
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Smart HUB	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Info	 Info / Angle
 Return	 Shift + Back / Return
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	E-Manual TV/Radio /		
	3D Zoom / Size		
	AD/Subt. Subtitle / EQ		
	Stop Stop / Hold		
	<</ << << / Tune-		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	>>/>>  >> / Tune+		

