



Original	Replacement	Original	Replacement
Power	Power	FAV.CH	Fav / Marker / PC
Tv/DVD	TV/Radio /	PRE-CH/Eject	Smart / List
1	1	Vol+	Vol+
Repeat	Shift + Green / APP /	Vol-	Vol-
2	2	Mute	Mute / Dimmer
EZ View	Shift + Zoom /	Source	AV / Input / RDS
Zoom	Zoom / Size	PR+	CH+ / Page+
3	3	PR-	CH- / Page-
4	4	Info	Info / Angle
Audio	Audio / Lang I/II	Menu	Menu / Home
5	5	DVD Menu	D.Menu / Top
6	6	Guide	Guide / EPG / -/--
Angle	Shift + Info / Angle	Tools	Setup / OPT /
7	7	Return	Back / Return
8	8	CH List	Shift + Smart / List
9	9	Exit/Cancel	Exit / Cancel / Clear
0	0	Up	Up



