

 
 
 

 


 
 
 
 

 

 

 

 

 

 







 

 

 



 

 








 

 

 

 

 
 


 

 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	Timer		Sleep / Timer
	Rec		Rec / Rec Mode
	Mute		Mute / Dimmer
	[●]		Zoom / Size
	*/Setup		Setup / OPT /
	EPG/Guide		Guide / EPG / -/-
			Picture / Format
	Π/Mode		Audio / Lang / I/II
	[:::]/KB		Display / Media
	FAV		Fav / Marker / PC
	APP		Green / APP / Repeat
	TV		TV/Radio /
	Red/F1		Red / Netflix / Search
	Green/F2		Shift + Green / APP /
	Yellow/F3		Yellow / YouTube / Repeat
	Blue/F4		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	CH+		CH+ / Page+
	CH-		CH- / Page-
	I<</PgUp		I<< / Preset-
	>>I/PgDown		>>I / Preset+
	Vol+		Vol+
	Vol-		Vol-
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement	Original	Replacement
 Play/Pause	 Play / Slow		
 Stop	 Stop / Hold		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 >[]<	 Subtitle / EQ		
 Recall	 Shift + Back / Return		

