







 
 





 








 

 

 

 

 





 


 










 



 

 













	Original	Replacement	Original	Replacement
	 Power	 Power	 Exit	 Exit / Cancel / Clear
	 Mute	 Mute / Dimmer	 Up/FAV+	 Up
	 1	 1	 Down/FAV-	 Down
	 2	 2	 Left	 Left
	 3	 3	 Right	 Right
	 4	 4	 Enter	 OK
	 5	 5	 CH+	 CH+ / Page+
	 6	 6	 CH-	 CH- / Page-
	 7	 7	 Display	 Display / Media
	 8	 8	 Open/Close/Smart	 Eject / Surround
	 9	 9	 VOL+	 Vol+
	 0	 0	 Vol-	 Vol-
	 FAV	 Fav / Marker / PC	 USB/Media	 Shift + Display / Media
	 Recall	 Back / Return	 Play/Pause/Text	 Play / Slow
	 Menu	 Menu / Home	 Stop/Index	 Stop / Hold
	 Source	 AV / Input / RDS	 Rec/Media2	 Rec / Rec Mode
	 EPG	 Guide / EPG / -/--	 I<</Hold	 I<< / Preset-





Original	Replacement
 >> /Size	 >>  / Preset+
 <</S.Page	 << / Tune-
 >>/Reveal	 >> / Tune+
 Red/Goto	 Red / Netflix / Search
 Green/Slow	 Green / APP / Repeat
 Yellow/REPT	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 D.Setup	 Setup / OPT /
 D.Menu	 D.Menu / Top
 D.Title	 Smart / List
 D.Prog	 Text / Goto
 I-II/Nicam	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 P.Size	 Zoom / Size
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer

Original	Replacement
 S.Title	 Pause / Step / Freeze
 Tv/Radio	 TV/Radio /

