

 











 









 

 









































 

 

 



 

 

























 







Original		Replacement		Original		Replacement	
	Power		Power		3 Tuner		3
	Sleep		Sleep / Timer		4 Tuner		4
	Phono		Red / Netflix / Search		5 Tuner		5
	Video		Blue / Prime Video / Random		6 Tuner		6
	Tape		Green / APP / Repeat		7 Tuner		7
	Tuner		TV/Radio /		8 Tuner		8
	CD		Yellow / YouTube / Repeat		9 Tuner		9
	Volume+		Vol+		10 Tuner		0
	Volume-		Vol-		Shift		Smart / List
	Disc Skip		Zoom / Size		1 CD		Shift + 1
	Play CD		Play / Slow		2 CD		Shift + 2
	Pause CD		Pause / Step / Freeze		3 CD		Shift + 3
	Stop CD		Stop / Hold		4 CD		Shift + 4
	I<< CD		I<< / Preset-		5 CD		Shift + 5
	>>I CD		>>I / Preset+		6 CD		Shift + 6
	1 Tuner		1		7 CD		Shift + 7
	2 Tuner		2		8 CD		Shift + 8





Original	Replacement	Original	Replacement
 9 CD	 Shift + 9	 > Deck B	 Up
 10 CD	 Shift + 0	 < Deck B	 Down
 11 CD	 Guide / EPG / -/--	 << Deck B	 CH- / Page-
 12 CD	 Fav / Marker / PC	 >> Deck B	 CH+ / Page+
 13 CD	 Shift + Guide / EPG / -/--		
 14 CD	 Shift + Fav / Marker / PC		
 15 CD	 Display / Media		
 16 CD	 Shift + Display / Media		
 Stop Deck A	 Shift + Stop /		
 << Deck A	 << / Tune-		
 >> Deck A	 >> / Tune+		
 > Deck A	 Right		
 < Deck A	 Left		
 Pause Deck B	 Shift + Pause / Step /		
 Rec Pause Deck B	 Shift + Rec / Rec Mode		
 Rec Deck B	 Rec / Rec Mode		
 Stop Deck B	 OK		

