



 

 





 



 









 

 









 











 



 

 



 




 






Original	Replacement	Original	Replacement
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Original	Replacement	Original	Replacement
 Yellow/FAV	 Yellow / YouTube / Repeat	 TV	 DVD
 Blue/A-Z	 Blue / Prime Video / Random	 SAT	 AUX
 Menu	 Menu / Home	 SLOW	 STEP - FREEZE
 EPG	 Guide / EPG / -/-	 HOLD	 REC MODE
 Info	 Info / Angle	 TUNE-	 TUNE+
 Up	 Up	 PRESET-	 PRESET+
 Down	 Down	 EQ	 SURROUND
 Right	 Right	 TITLE	 LANG
 Left	 Left	 SUBTITLE	 TIMER
 OK	 OK	 PICTURE	 ZOOM
 Vol+	 Vol+	 SLEEP	 PROGRAM
 Vol-	 Vol-	 TOP MENU	 OPT-TOOLS
 Exit	 Exit / Cancel / Clear	 GOTO	 RDS
 Page+	 CH+ / Page+	 D.MENU	 SETUP
 Page-	 CH- / Page-	 TEXT	 AV INPUT
 Pause	 Pause / Step / Freeze	 HOME	 ANGLE
 Play	 Play / Slow	 MENU	 INFO



