
















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Original	Replacement
 Vol+	 Vol+
 MTS /II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 Aspect	 Zoom / Size
 Freeze	 Shift + Pause / Step /
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement	Original	Replacement
EXIT	Exit / Cancel / Clear EXIT CANCEL	REC	Rec / Rec Mode REC MODE
Red	Red / Netflix / Search NETFLIX SEARCH	EPG	Guide / EPG / -/- GUIDE EPG
Green	Green / APP / Repeat APP REPEAT		
Yellow	Yellow / YouTube / Repeat YouTube REPEAT A-B		
Blue	Blue / Prime Video / Random Prime Video RANDOM		
<< / Text/CC 	<< / Tune- 		
<< / Text/CC 	Text / Goto 		
Play/Pause / 	Pause / Step / Freeze 		
Play/Pause / 	Play / Slow 		
>> / Reveal 	>> / Tune+ 		
I<< / Hold 	I<< / Preset- 		
>>I / Size 	>>I / Preset+ 		
Stop / Index 	Stop / Hold 		
Root 	Setup / OPT / SETUP		
Repeat 	Shift + Green / APP / + REPEAT		
List 	Smart / List 		
T.Shift 	D.Menu / Top D.MENU		

