




























 







 

 

Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 SAT	 Shift + 0
 SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Replacement
 Text	 Text / Goto
 Live	 Display / Media
 VOD	 Smart / List
 Series	 Shift + Display / Media
 WEB TV	 Shift + Smart / List
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 Page+	 CH+ / Page+





Original		Replacement	
	Vol-		Vol-
	Mute		Mute / Dimmer
	Page-		CH- / Page-
	Red / F1		Red / Netflix / Search
	Green / F2		Green / APP / Repeat
	Yellow / F3		Yellow / YouTube / Repeat
	Blue / IPTV		Blue / Prime Video / Random
	Option		Setup / OPT /
	V-Format		Picture / Format
	Resolution		Zoom / Size
	Sleep		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Original		Replacement	
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

