



Original		Replacement		Original		Replacement	
	Power		Power		AV/Input		AV / Input / RDS
	Open/Close		Eject / Surround		Vol- Tv		Vol-
	Power Tv	+	Shift + Power		<<		<< / Tune-
	1		1		>>		>> / Tune+
	2		2		<<		<< / Preset-
	3		3		>>		>>  / Preset+
	PR/CH+ Tv		CH+ / Page+		Pause		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		CH- / Page-		Up		Up
	7		7		Info/Display		Info / Angle
	8		8		Right		Right
	9		9		Enter		OK
	Vol+ Tv		Vol+		Left		Left
	Clear		Exit / Cancel / Clear		Back		Back / Return
	0		0		Down		Down





	Original	Replacement		Original	Replacement
	Disc Menu	D.Menu / Top			
	Zoom	Zoom / Size			
	Marker	Fav / Marker / PC			
	Search	Shift + Red / Netflix /			
	Title/Pop-Up	TV/Radio /			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Repeat	Shift + Green / APP /			
	O)/Audio	Audio / Lang I/II			
	[...]/Subtitle	Subtitle / EQ			
	Tv Mute	Mute / Dimmer			

	Original	Replacement		Original	Replacement

