



 

 

 

 

 

 

 

 

 









 







 





 

 

 

 





 





 















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text / Goto
	[i]		Info / Angle
	Tv/Rad		TV/Radio /
	TV		Smart / List
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II

Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	ALT		Display / Media
	SUB		Subtitle / EQ
	Browse		AV / Input / RDS
	Freeze		Pause / Step / Freeze
	Up/CH+		Up
	Down/CH-		Down
	Vol-		Vol-
	Left		Left
	Vol+		Vol+
	Right		Right
	OK		OK
	Page+		CH+ / Page+
	Page-		CH- / Page-
	Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		

