



 



 






 







 



 


 







Original	Replacement
 Power	 Power
 Top Menu	 D.Menu / Top
 View/Bonus	 Guide / EPG / -/-
 Repeat	 Shift + Green / APP / REPEAT
 HDMI	 Shift + 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Disc/Pop-Up/Menu	 Menu / Home
 Home	 Shift + Home / Menu /
 Options	 Setup / OPT /
 Back	 Back / Return
 [i]/Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left

Original	Replacement
 Right	 Right
 OK	 OK
 I<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Tv CH+	 CH+ / Page+
 Tv CH-	 CH- / Page-
 1	 1
 2	 2



