





















 

 



 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Shift + Smart / List
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Info	 Info / Angle
 TTX	 Text / Goto

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Lang	 Audio / Lang I/II
 Timeshift	 Smart / List
 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/--
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





	Original	Replacement	Original	Replacement
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Preset+		
	Rec	 Rec / Rec Mode		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	<<	 << / Preset-		
	Stop	 Stop / Hold		
	Timer	 Sleep / Timer		
	PVR	 AV / Input / RDS		
	V-Format	 Shift + 4		
	Aspect	 Picture / Format		

