









 
 








 

 





 





 









 



 
 


 







 












 








Original	Replacement	Original	Replacement
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/--
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home

Original	Replacement	Original	Replacement
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/--
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home





Original		Replacement		Original	Replacement
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	List		Shift + Smart / List		
	FAV CH		Fav / Marker / PC		
	Timer		Shift + Sleep / Timer		
	Freeze		Pause / Step / Freeze		

