



Original	Replacement
Power	Power
CD1	Red / Netflix / Search
CD2	Green / APP / Repeat
CD3	Yellow / YouTube / Repeat
Sound Mode	Sound / Title
S.A. Bass	Setup / OPT /
Sleep	Sleep / Timer
Pro Logic	Menu / Home
1	1
1 FM/AM	Shift + 1
2	2
3 Stereo	Info / Angle
2 FM/AM	Shift + 2
3	3
Test Tone	Back / Return
3 FM/AM	Shift + 3
Center Level-	CH- / Page-

Original	Replacement
4	4
4 FM/AM	Shift + 4
Center Level+	CH+ / Page+
5	5
5 FM/AM	Shift + 5
6	6
6 FM/AM	Shift + 6
Center Mode	OK
7	7
7 FM/AM	Shift + TV/Radio / Program
Rear Level-	Down
8 FM/AM	Shift + 8
Rear Level+	Up
8	8
9 FM/AM	Shift + 9
Delay Time	Shift + Sleep / Timer
9	9





Original	Replacement
10	Guide / EPG / --
L Balance	Left
Balance R	Right
+10	Fav / Marker / PC
FM Mode	TV/Radio /
Tape A	Picture / Format
Tape B	Zoom / Size
Rec Pause	Rec / Rec Mode
<</><< FM/AM	<< / Tune-
<</><< CD	I<< / Preset-
>>/>>I FM/AM	>> / Tune+
>>/>>I CD	>>I / Preset+
Tape <>	Blue / Prime Video / Random
Pause CD	Pause / Step / Freeze
Play CD	Play / Slow
Fade Muting	Mute / Dimmer
AUX	Shift + 7

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Stop	Stop / Hold
FM/AM	Display / Media

