









 
 
Original	Replacement
Standby/on	Power
Open/Close	Eject / Surround
Power Tv Control	Shift + Power
Input Select Tv Control	Shift + Display / Media
CH+ Tv Control	Shift + CH+ /
CH- Tv Control	Shift + CH- /
Vol+ Tv Control	Vol+
Vol- Tv Control	Vol-
Video Output	Shift + 4
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Front Light	Zoom / Size
1	1
2	2
3	3
4	4

Original	Replacement
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit / Cancel / Clear
Secondary	Picture / Format
Keylock	Mute / Dimmer
Repeat	Shift + Green / APP / Repeat
Repeat Off	Shift + Yellow / YouTube / Repeat A-B
Page+	CH+ / Page+
Page-	CH- / Page-
Exit	Exit / Cancel / Clear
Display	Display / Media
Function	TV/Radio /
Top Menu/Disc Navigator	Smart / List





Original	Replacement
 Menu/Pop Menu	 D.Menu / Top
 Home Menu	 Menu / Home
 Return	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 <</Rev	 << / Tune-
 Play	 Play / Slow
 >>/Fwd	 >> / Tune+
 I<</>I</>	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I/I>/I>	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 Replay	 Setup / OPT /
 Skip Search	 Shift + TV/Radio / Program

