



Original	Replacement	Original	Replacement
Power	Power	Set	Menu / Home
1	1	Cancel	Exit / Cancel / Clear
2	2	Up	Up
3	3	Down	Down
4	4	I<<	I<< / Preset-
5	5	I<<	Shift + I<< / Preset-
6	6	>>I	Shift + >>I / Preset+
7	7	>>I	>>I / Preset+
8	8	Stop	Stop / Hold
9	9	Stop	Shift + Stop /
10	Guide / EPG / -/--	Play CD	Play / Slow
+10	Fav / Marker / PC	Pause CD	Pause / Step / Freeze
Display	Display / Media	Tape <>	Shift + 5
Clock/Timer	Shift + Sleep / Timer	Tuner	Shift + 6
Sleep	Sleep / Timer	Aux	Shift + 7
Bass	CH- / Page-	Rev Mode	Audio / Lang I/II
Treble	CH+ / Page+	FM Mode	TV/Radio /





Original		Replacement		Original	Replacement
	Auto Preset		AV / Input / RDS		
	PRGM		Shift + TV/Radio / Program		
	Random		Blue / Prime Video / Random		
	Repeat		Green / APP / Repeat		
	AHB Pro		Picture / Format		
	Vol+		Vol+		
	Vol-		Vol-		

