



Original	Replacement
	Power
	CBL/SAT
	DVD
	Tv Audio
	Blu-ray
	AUX
	Tuner
	Bluetooth
	Game
	8K
	Phono
	USB
	Media Player
	CD
	Internet Radio
	Quick Select 1

Original	Replacement
	Quick Select 2
	Quick Select 3
	Quick Select 4
	CH/Page Up
	CH/Page Down
	Eco
	Mute
	Volume+
	Volume-
	Info
	Option
	Back
	Setup
	Up
	Down
	Left
	Right





 




 


 



Original	Replacement
I<</Tune-	I<< / Preset-
Play	Play / Slow
>>I/Tune+	>>I / Preset+
<<	<< / Tune-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>	>> / Tune+
Green/Movie	Green / APP / Repeat
Red/Music	Red / Netflix / Search
Blue/Game	Blue / Prime Video / Random
Yellow/Pure	Yellow / YouTube / Repeat
1	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
0	0
Enter	OK
Sleep	Sleep / Timer











 

 



 





 







 



Original	Replacement
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + Blue / Prime
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Blue / Prime Video / Random
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-







 

 





 
 










Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	Sleep		Sleep / Timer





Original	Replacement
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Blue / Prime Video / Random
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Green / APP / Repeat
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-





Original	Replacement
	Pause / Step / Freeze
	Stop / Hold
	>> / Tune+
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK
	Sleep / Timer

Original	Replacement

