












 







 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 Audio	 Audio / Lang I/II

Original	Replacement
 Slow	 Shift + Play /
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 UP	 Up
 DOWN	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 CH+	 CH+ / Page+





Original		Replacement		Original	Replacement
	CH-		CH- / Page-		
	Vol+		Vol+		
	Vol-		Vol-		
	TV/Radio		TV/Radio /		
	Teletext		Text / Goto		
	Subtitle		Subtitle / EQ		
	Return		Back / Return		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Navi		Display / Media		

