



Original	Replacement	Original	Replacement
Standby	Shift + Power	CD	3
On	Power	CDR	Guide / EPG / -/-
HDMI	AV / Input / RDS	Tune	6
A/D	Audio / Lang I/II	M-XP	5
Test Tone	Text / Goto	Input Up	>>I / Preset+
SPKR A-B	Setup / OPT /	Mute	Mute / Dimmer
Z2	Yellow / YouTube / Repeat	Volume+	Vol+
Z3	Blue / Prime Video / Random	Input Down	I<< / Preset-
BD	Green / APP / Repeat	Display	Display / Media
DVD	2	Surr	Eject / Surround
VCR	4	Volume-	Vol-
SAT	0	Shift	Back / Return
GAME	Fav / Marker / PC	Up	Up
AUX1	7	Info	Info / Angle
Network	9	Search	Red / Netflix / Search
USB	8	Left	Left
TV	1	Enter	OK



 





 















 



 





































 





Original	Replacement	Original	Replacement
	Right		Right
	Menu		Menu / Home
	Down		Down
	Auto		Smart / List
	Stereo		Sound / Title
	P.Direct		Picture / Format
	MultEQ		Subtitle / EQ
	M-DAX		D.Menu / Top
	DYN EQ		Shift + Subtitle / EQ
	DYN Vol		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	Channel-		CH- / Page-
	Channel+		CH+ / Page+

Original	Replacement	Original	Replacement



 





Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >> / Preset+
 Mute	 Mute / Dimmer	 <<	 << / Tune-
 Volume+	 Vol+	 >>	 >> / Tune+
 Display	 Display / Media	 1	 1
 Memory	 Smart / List	 2	 2
 Volume-	 Vol-	 3	 3
 Up	 Up	 Repeat	 Green / APP / Repeat
 Info	 Info / Angle	 4	 4
 Left	 Left	 5	 5
 Enter	 OK	 6	 6
 Right	 Right	 Random	 Blue / Prime Video / Random
 Menu	 Menu / Home	 7	 7
 Down	 Down	 8	 8
 Pause	 Pause / Step / Freeze	 9	 9
 Play	 Play / Slow	 CLR	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 0	 0
 I<<	 I<< / Preset-	 +10	 Guide / EPG / -/-







 



 

 

 



 







Original		Replacement		Original		Replacement	
	CH-		CH- / Page-				
	CH+		CH+ / Page+				





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 T.Mode	 Text / Goto
 Display	 Display / Media
 Memory	 Setup / OPT /
 Volume-	 Vol-
 Info	 Info / Angle
 Enter	 OK
 Menu	 Menu / Home
 Band	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 CLR	 Exit / Cancel / Clear
 0	 0
 Tune-	 << / Tune-
 Tune+	 >> / Tune+
 Preset-	 I<< / Preset-
 Preset+	 >>I / Preset+

