










 

 






 










Original	Replacement
 Power	 Power
 Guide	 Guide / EPG / -/--
 Input Tv	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL/AD	 Subtitle / EQ
 Aspect	 Picture / Format
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 Home	 Shift + Menu /
 APPS	 Shift + Green / APP /
 Option	 Setup / OPT /
 Return	 Back / Return
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Fav / Marker / PC
	Hexa Boost		Sound / Title
	<</ <<		<< / Tune-
	Play		Play / Slow
	>>/>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Off Timer		Sleep / Timer
	My APP		Smart / List
	e-Help		Audio / Lang I/II

Original	Replacement	Original	Replacement

