



| Original | Replacement |
|--------------|----------------------------|
| On | Power |
| Off | Shift + Power |
| Mute | Mute / Dimmer |
| AVR | Fav / Marker / PC |
| DVD | Shift + 2 |
| CD | Shift + 3 |
| Tape | Shift + 5 |
| VID1/VCR | Guide / EPG / -/-- |
| VID2/TV | Shift + 1 |
| VID3/CBL/SAT | Shift + 0 |
| VID4 | Shift + Guide / EPG / -/-- |
| AM/FM | Shift + 6 |
| 6/8 CH | Picture / Format |
| Sleep | Sleep / Timer |
| Test | Text / Goto |
| Vol+ | Vol+ |
| Surr. | Eject / Surround |

| Original | Replacement |
|--------------|---------------------------|
| Night | Info / Angle |
| M-Room | Zoom / Size |
| Vol- | Vol- |
| CH./[≡?] | Yellow / YouTube / Repeat |
| Up | Up |
| SPKR/Menu | Menu / Home |
| Left | Left |
| Set | D.Menu / Top |
| Right | Right |
| Digital/[≡X] | Red / Netflix / Search |
| Down | Down |
| Delay/Normal | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |













 



 







 



















 









 













 
 


| Original | Replacement |
|------------|-----------------------|
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| Tun-M/[≡+] | Green / APP / Repeat |
| 9 | 9 |
| 0 | 0 |
| Mem/[≡◆] | Rec / Rec Mode |
| Tuning ▲ | >> / Tune+ |
| Direct | TV/Radio / |
| Clear | Exit / Cancel / Clear |
| Preset ▲ | >>I / Preset+ |
| Tuning ▼ | << / Tune- |
| OSD | Display / Media |
| RDS | AV / Input / RDS |
| Preset ▼ | I<< / Preset- |
| Dolby | Sound / Title |
| DTS Surr. | Smart / List |

| Original | Replacement |
|---------------|-----------------------------|
| DTS Neo 6 | Subtitle / EQ |
| Logic 7 | Blue / Prime Video / Random |
| Stereo | Audio / Lang I/II |
| I<</Skip Down | Shift + I<< / Preset- |
| Skip Up/>>I | Shift + >>I / Preset+ |
| << DVD | Shift + << / |
| Play DVD | Play / Slow |
| >> DVD | Shift + >> / |
| Stop DVD | Stop / Hold |
| Pause DVD | Pause / Step / Freeze |





| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|---------------------------|---|------------|---|-----------------------|
|  | Power On |  | Power |  | 3 |  | 3 |
|  | Power Off |  | Shift + Power |  | 4 |  | 4 |
|  | Vol+ |  | Vol+ |  | 5 |  | 5 |
|  | Night |  | Info / Angle |  | 6 |  | 6 |
|  | M-Room |  | Zoom / Size |  | 7 |  | 7 |
|  | Vol- |  | Vol- |  | 8 |  | 8 |
|  | CH./[≡?] |  | Yellow / YouTube / Repeat |  | Tun-M/[≡+] |  | Green / APP / Repeat |
|  | Up |  | Up |  | 9 |  | 9 |
|  | SPKR/Menu |  | Menu / Home |  | 0 |  | 0 |
|  | Left |  | Left |  | Mem/[≡◇] |  | Rec / Rec Mode |
|  | Set |  | D.Menu / Top |  | Direct |  | TV/Radio / |
|  | Right |  | Right |  | Clear |  | Exit / Cancel / Clear |
|  | Digital/[≡X] |  | Red / Netflix / Search |  | Preset ▲ |  | Shift + >> / Preset+ |
|  | Down |  | Down |  | RDS/D.Skip |  | AV / Input / RDS |
|  | Delay/Normal |  | Setup / OPT / |  | Preset ▼ |  | Shift + I<< / Preset- |
|  | 1 |  | 1 |  | I<< |  | I<< / Preset- |
|  | 2 |  | 2 |  | >> |  | >> / Preset+ |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|--|---|
|  Power On |  Power |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Mem/[≡ ♦] |  Rec / Rec Mode |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Direct |  TV/Radio / |
|  Delay/Normal |  Setup / OPT / |
|  RDS/D.Skip |  AV / Input / RDS |
|  SPKR/Menu |  Menu / Home |
|  Power (On/Off) |  OK |
|  Clear VCR |  Exit / Cancel / Clear |
|  Vol+ VCR |  Vol+ |
|  PR+ VCR |  CH+ / Page+ |

| Original | Replacement |
|---|---|
|  Vol- VCR |  Vol- |
|  PR- VCR |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Tun-M/[≡ +] |  Green / APP / Repeat |
|  Preset ▲/Blue |  Blue / Prime Video / Random |
|  Power Off |  Shift + Power |
|  Play VCR |  Shift + Play / |
|  Stop VCR |  Shift + Stop / |

Hold





| Original | Replacement |
|----------|---------------------------|
| Rec VCR | + Shift + Rec / Rec Mode |
| << VCR | + Shift + << / |
| >> VCR | + Shift + >> / |
| 1 VCR | + Shift + 1 |
| 2 VCR | + Shift + 2 |
| 3 VCR | + Shift + 3 |
| 4 VCR | + Shift + 4 |
| 5 VCR | + Shift + 5 |
| 6 VCR | + Shift + 6 |
| 7 VCR | + Shift + 7 |
| 8 VCR | + Shift + 8 |
| 9 VCR | + Shift + 9 |
| 0 VCR | + Shift + 0 |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





Original

Replacement

| | | | |
|--|------|--|----------------|
| | <> | | Play / Slow |
| | >> | | >> / Tune+ |
| | << | | << / Tune- |
| | Stop | | Stop / Hold |
| | Rec | | Rec / Rec Mode |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Original

Replacement

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

