



 











 















 



 







 
















 


































Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop / Hold
 Open / Close	 Eject / Surround	 Play	 Play / Slow
 Display	 Display / Media	 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II	 Previous	 I<< / Preset-
 Subtitle	 Subtitle / EQ	 Next	 >>I / Preset+
 Angle	 Info / Angle	 REV	 << / Tune-
 Setup	 Setup / OPT /	 FWD	 >> / Tune+
 Menu	 Menu / Home	 Return	 Back / Return
 Top Menu	 D.Menu / Top	 <II Step/Slow	 CH- / Page-
 Multi Dial-	 Down	 Step/Slow II>	 CH+ / Page+
 Multi Dial+	 Up	 Search Mode	 Red / Netflix / Search
 Enter	 OK	 1	 1
 Function	 Fav / Marker / PC	 2	 2
 Video Adjust	 Picture / Format	 3	 3
 FL Dimmer	 Mute / Dimmer	 Clear	 Exit / Cancel / Clear
 Jog Mode 1	 Left	 4	 4
 Jog Mode 2	 Right	 5	 5





Original		Replacement		Original		Replacement	
	6		6				
	+10		Guide / EPG / -/--				
	7		7				
	8		8				
	9		9				
	0		0				
	Random		Blue / Prime Video / Random				
	Repeat		Green / APP / Repeat				
	Repeat A-B		Yellow / YouTube / Repeat				
	Program		TV/Radio /				
	Last Memory		Vol+				
	Condition Memory		Vol-				

