


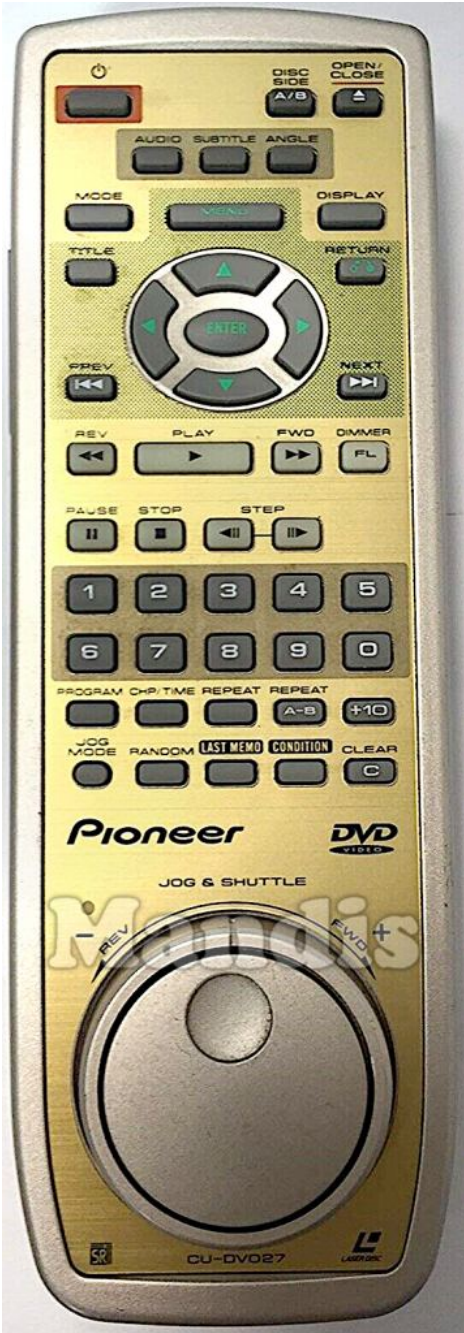



















Original	Replacement
	Power
	Disc Side A/B
	Open/Close
	Audio
	Subtitle
	Angle
	Display
	Menu
	Title
	Up
	Return
	Left
	Enter
	Right
	Prev
	Down
	Next

Original	Replacement
	Rev
	Pause
	Play
	FWD
	Stop
	Step II >
	1
	2
	3
	Clear
	4
	5
	6
	+10
	7
	8





Original		Replacement	
	9		9
	0		0
	Program		TV/Radio /
	CHP/Time		Setup / OPT /
	Mode		Picture / Format
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Last Memo		Fav / Marker / PC
	Condition		Zoom / Size

Original	Replacement

