










 
















Original	Replacement
 Standby / On	 Power
 Title	 Sound / Title
 Menu	 Menu / Home
 Open / Close	 Eject / Surround
 OSD / Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 Slow Fwd	 Shift + Play /
 4	 4
 5	 5
 6	 6
 Prev / Rev	 << / Tune-
 Prev / Rev	 I<< / Preset-
 7	 7
 8	 8
 9	 9

Original	Replacement
 Next / Fwd	 >> / Tune+
 Next / Fwd	 >>I / Preset+
 0	 0
 Clear	 Exit / Cancel / Clear
 Search	 Red / Netflix / Search
 Pause / Step	 Pause / Step / Freeze
 Up	 Up
 Play	 Play / Slow
 Left	 Left
 Enter	 OK
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Return	 Back / Return
 Play Mode	 Display / Media
 A-B	 Yellow / YouTube / Repeat
 Memory	 Fav / Marker / PC





	Original	Replacement		Original	Replacement
	Timer	 Sleep / Timer			
	Equalizer	 Shift + Subtitle / EQ			
	Vol / CH	 Smart / List			
	empty left	 CH- / Page-			
	empty right	 CH+ / Page+			
	Zoom	 Zoom / Size			
	Angle	 Info / Angle			
	Subtitle	 Subtitle / EQ			
	Audio	 Audio / Lang I/II			

