























 
 








 



 




 




 














Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Shift + Guide / EPG / -/--
	 4
	 5
	 6
	 Shift + Back / Return
	 7
	 8
	 9
	 0
	 Menu / Home
	 Up
	 Guide / EPG / -/--

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Display / Media
	 Vol+
	 Shift + Fav / Marker / PC
	 CH+ / Page+
	 Vol-
	 AV / Input / RDS
	 CH- / Page-
	 Shift + 2
	 Shift + 1
	 Text / Goto
	 Shift + Text /
	 Info / Angle



