









 

 





 





Original	Replacement
	Power
	Guide / EPG / -/--
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Picture / Format
	Shift + Display / Media
	Zoom / Size
	Info / Angle
	Exit / Cancel / Clear
	Display / Media
	Shift + Red / Netflix /
	Smart / List
	Up
	Down
	Left
	Right

Original	Replacement
	OK
	D.Menu / Top
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Vol-
	Mute / Dimmer
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5



