



 





 

 



 

 

 

 





 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green / APP / Repeat
 Mute	 Mute / Dimmer	 Sub	 Subtitle / EQ
 Stop	 Stop / Hold	 Yellow	 Yellow / YouTube / Repeat
 Play	 Play / Slow	 Sleep	 Sleep / Timer
 Pause	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-	 Timer	 Shift + Sleep / Timer
 >>	 >> / Tune+	 Menu	 Menu / Home
 Rec	 Rec / Rec Mode	 i	 Info / Angle
 USB	 Shift + 8	 Up	 Up
 <<	 << / Preset-	 Left	 Left
 >>	 >> / Preset+	 OK	 OK
 HELP	 List / Smart / List	 Right	 Right
 FAV	 Shift + FAV / Marker / PC	 Exit	 Exit / Cancel / Clear
 AUDIO	 Audio / Lang I/II	 Down	 Down
 OPTION	 Setup / OPT /	 BACK	 Back / Return
 TTX	 Red / Netflix / Search	 Vol+	 Vol+
 TTX	 Text / Goto	 EPG	 Guide / EPG / -/-





Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 List	 Shift + Smart / List
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC

Original	Replacement

