

 



 

 

 

 

 

 

 









 

 

 
 


Original	Replacement
Power	Power
TV/Video	AV / Input / RDS
Counter Reset	Exit / Cancel / Clear
1	1
2	2
3	3
Prog +	CH+ / Page+
4	4
5	5
6	6
Prog -	CH- / Page-
7	7
8	8
9	9
Display	Display / Media
0	0
Rec	Rec / Rec Mode

Original	Replacement
Timer Rec	Sleep / Timer
Slow	Shift + Play /
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
SP/LP	Sound / Title
A.Select	Audio / Lang I/II





Original		Replacement		Original		Replacement	
	Power		Power				
	Source		AV / Input / RDS				
	1		1				
	2		2				
	3		3				
	PR+		CH+ / Page+				
	4		4				
	5		5				
	6		6				
	PR-		CH- / Page-				
	7		7				
	8		8				
	9		9				
	Vol+		Vol+				
	0		0				
	Vol-		Vol-				

