


Original	Replacement	Original	Replacement
	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

Original	Replacement	Original	Replacement
	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+

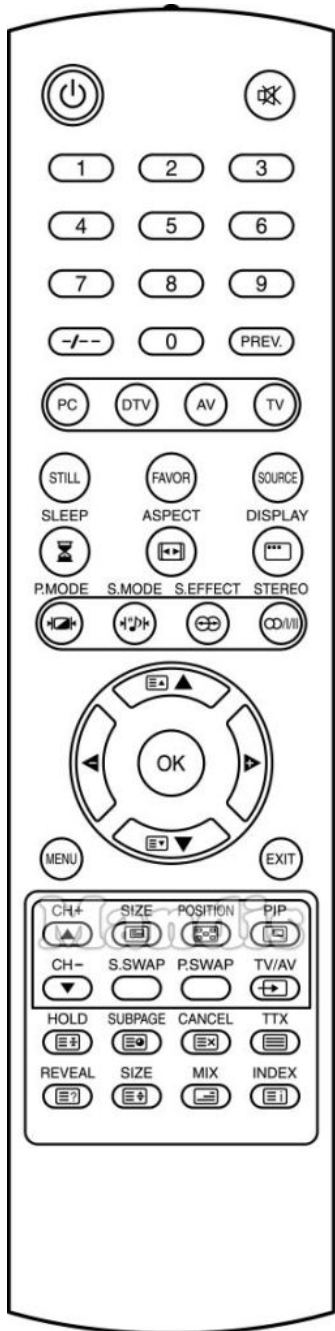



Original	Replacement
	Left / Vol-
	Left
	Left / Vol-
	VOL -
	OK
	Right / Vol+
	Vol+
	Right / Vol+
	Right
	Menu
	Menu / Home
	Down / CH-
	Down
	Down / CH-
	CH- / Page-
	Exit
	Exit / Cancel / Clear
	PIP CH+
	SHIFT + CH+ /
	PIP Size
	SHIFT + Red / Netflix /
	PIP Position
	SHIFT + Green / APP /
	PIP
	Smart / List
	PIP CH-
	SHIFT + CH- /
	PIP S.Swap
	SHIFT + Prime Video / Prime
	PIP P.Swap
	SHIFT + YouTube / YouTube /
	PIP TV/AV
	SHIFT + AV / Input / RDS

Original	Replacement
	Hold
	Stop / Hold
	Subpage
	EQ
	Subtitle / EQ
	Cancel
	SHIFT + EXIT / Cancel / Clear
	TTX
	GOTO
	Text / Goto
	Reveal
	TOP MENU
	D.MENU
	D.Menu / Top
	Size
	SIZE
	Zoom / Size
	Mix
	SHIFT + GOTO
	Text /
	Index
	ANGLE
	Info / Angle

