



| Original  |                   | Replacement   |                       | Original  |             | Replacement   |                           |
|---|-------------------|---|-----------------------|---|-------------|---|---------------------------|
|    | Power             |    | Power                 |  | Bass-       |  | CH- / Page-               |
|    | Optical           |    | 8                     |  | Down / Vol- |  | Vol-                      |
|    | Mute              |    | Mute / Dimmer         |  | Down / Vol- |  | Down                      |
|    | AUX               |    | 7                     |  | Treb-       |  | << / Tune-                |
|    | BT                |    | 9                     |  | Flat        |  | Red / Netflix / Search    |
|    | HDMI ARC          |    | 0                     |  | Movie       |  | Green / APP / Repeat      |
|    | Bass+             |    | CH+ / Page+           |  | Music       |  | Yellow / YouTube / Repeat |
|    | Up / Vol+         |    | Up                    |   |             |   |                           |
|    | Up / Vol+         |    | Vol+                  |   |             |   |                           |
|   | Treb+             |   | >> / Tune+            |   |             |   |                           |
|  | Left / I<<        |  | I<< / Preset-         |   |             |   |                           |
|  | Left / I<<        |  | Left                  |   |             |   |                           |
|  | Play/Pause / Pair |  | Smart / List          |   |             |   |                           |
|  | Play/Pause / Pair |  | Pause / Step / Freeze |   |             |   |                           |
|  | Play/Pause / Pair |  | Play / Slow           |   |             |   |                           |
|  | Right / >>I       |  | >>I / Preset+         |   |             |   |                           |
|  | Right / >>I       |  | Right                 |   |             |   |                           |

