

















 







 





 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 DNR	 Setup / OPT /
 MTS	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
FAV	Fav / Marker / PC
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Play/Pause / Size	Play / Slow
Play/Pause / Size	Shift + Zoom /
Play/Pause / Size	Pause / Step / Freeze
Stop / Reveal	Stop / Hold
EPG	Guide / EPG / --
Info	Info / Angle
I<< / Text	Text / Goto
I<< / Text	I<< / Preset-
>>I / Index	>>I / Preset+
<< / Subpage	<< / Tune-
>> / Hold	Shift + Stop / Hold

Hold

Original	Replacement
>> / Hold	>> / Tune+

