





 

































 

 





 

 

 

 

 



 
 


Original	Replacement	Original	Replacement
Auto Memory	Green / APP / Repeat	9	9
Memory	Red / Netflix / Search	Sound	Sound / Title
Power Receiver	Power	+10	Guide / EPG / -/-
PTY	Info / Angle	0	0
Display	Display / Media	HDMI Setup	Menu / Home
Virtual	Smart / List	Setup	Setup / OPT /
Active EQ	Subtitle / EQ	Listen Mode	Blue / Prime Video / Random
1	1	Pure Audio	Yellow / YouTube / Repeat
2	2	Multi Control	CH- / Page-
3	3	Multi Control Up	CH+ / Page+
Bass Boost	Eject / Surround	Volume+	Vol+
4	4	Volume-	Vol-
5	5	Band	TV/Radio /
6	6	Auto/Mono	Audio / Lang I/II
Tone	Text / Goto	Mute	Mute / Dimmer
7	7	P.Call-	I<< / Preset-
8	8	P.Call+	>>I / Preset+





Original	Replacement
 Power DVD	 Power
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Display / Media
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

