








Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 TV / Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 HD / SD	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0

Original	Replacement
 AV	 AV / Input / RDS
 Vol+	 Vol+
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Up	 Up
 CH-	 CH- / Page-
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Home	 D.Menu / Top
 EPG	 Guide / EPG / -/-
 List	 Smart / List
 Fav	 Fav / Marker / PC
 Dual Screen	 Setup / OPT /





	Original	Replacement	Original	Replacement
		Info / Angle		
		Red / Netflix / Search		
		Stop / Hold		
		Green / APP / Repeat		
		Pause / Step / Freeze		
		Play / Slow		
		<< / Tune-		
		Yellow / YouTube / Repeat		
		>> / Tune+		
		Blue / Prime Video / Random		
		Shift + Green / APP /		
		Picture / Format		
		Sleep / Timer		
		Audio / Lang I/II		

