



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto
	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Auto	Fav / Marker / PC
Red/Program	Red / Netflix / Search
Green/Intro	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random
Hold	Shift + Stop /
Title	Shift + Sound / Title
Nicam	Shift + Audio / Lang I/II

Original	Replacement
Aspect	Shift + Picture / Format
D.Subt.	Shift + Zoom /
Goto	Shift + Text /
Angle	Shift + Info / Angle
Slow/PgUp	Shift + CH+ /
D.Disp	Shift + Display / Media
Step/PgDn	Shift + CH- /

