








































 








 


Original	Replacement
 Power Tv	 Power
 Power STB	 Shift + Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Replacement
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Shift + Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





	Original	Replacement		Original	Replacement
		Green / APP / Repeat			
		Yellow / YouTube / Repeat			
		Blue / Prime Video / Random			
		Display / Media			
		Shift + Red / Netflix /			
		Picture / Format			
		D.Menu / Top			
		Audio / Lang I/II			
		Subtitle / EQ			
		<< / Tune-			
		Pause / Step / Freeze			
		>> / Tune+			
		Rec / Rec Mode			
		Play / Slow			
		Stop / Hold			

