



|   | Original  | Replacement   | Original              | Replacement |
|---|-----------|---|-----------------------|-------------|
|    | Standby   |    | Power                 |             |
|    | Up        |    | Up                    |             |
|    | Play      |    | Play / Slow           |             |
|    | Pause     |    | Pause / Step / Freeze |             |
|    | I<</Left  |    | Left                  |             |
|    | Enter     |    | OK                    |             |
|    | Right/>>I |    | Right                 |             |
|    | Menu      |    | Menu / Home           |             |
|    | Down      |    | Down                  |             |
|    | iPod/AUX  |    | AV / Input / RDS      |             |
|   | Treble-   |   | CH- / Page-           |             |
|  | Treble+   |  | CH+ / Page+           |             |
|  | Bass-     |  | I<< / Preset-         |             |
|  | Bass+     |  | >>I / Preset+         |             |
|  | Mute      |  | Mute / Dimmer         |             |
|  | Vol-      |  | Vol-                  |             |
|  | Vol+      |  | Vol+                  |             |

