



























 











Original	Replacement	Original	Replacement
On/Off	 Power	Back	 Back / Return
Mute	 Mute / Dimmer	Volume+	 Vol+
Menu audio	 Audio / Lang I/II	Reveal	 Smart / List
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media
Update	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4
Info	 Info / Angle	5	 5
Menu Left	 Left	6	 6
OK Enter	 OK	7	 7
Menu Right	 Right	8	 8
Menu Off	 Exit / Cancel / Clear	9	 9
Menu Down	 Down	0/10	 0



Original	Replacement	Original	Replacement
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

