


Original	Replacement
Display	Display / Media
Eject	Eject / Surround
On / Standby	Power
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9
TRK+	Vol+
I.Select	Smart / List
0	0

Original	Replacement
Count.Rst.	Back / Return
TRK-	Vol-
F.Adv	>>I / Preset+
Index-	Down
Index+	Up
Count/TR	Text / Goto
Annul.	Exit / Cancel / Clear
Menu	Menu / Home
ENR.	Rec / Rec Mode
Timer	Sleep / Timer
Play	Play / Slow
<< Rew	<< / Tune-
>> FF	>> / Tune+
I> Slow	Shift + Play /
Stop	Stop / Hold
Pause / Still	Pause / Step / Freeze
SP/LP	Picture / Format

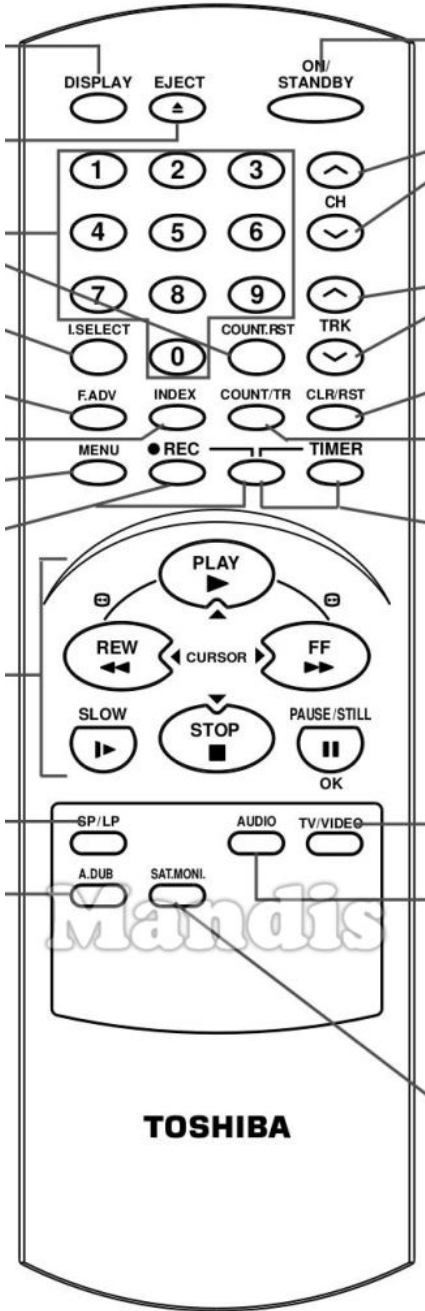



Original	Replacement
Audio	Audio / Lang I/II
TV/Video	TV/Radio /
A.Dub	Sound / Title
Sat. Moni.	D.Menu / Top

Original	Replacement

