



Original		Replacement		Original		Replacement	
	Input		AV / Input / RDS		OK		OK
	Power		Power		Right		Right
	Xumo		Setup / OPT /		Down		Down
	Netflix		Red / Netflix / Search		Back		Back / Return
	Amazon		Blue / Prime Video / Random		Guide		Guide / EPG / -/-
	<<		<< / Tune-		Vol+		Vol+
	Pause		Pause / Step / Freeze		V		Display / Media
	Play		Play / Slow		CH+		CH+ / Page+
	>>		>> / Tune+		Vol-		Vol-
	CC		Subtitle / EQ		CH-		CH- / Page-
	Rec		Rec / Rec Mode		Mute		Mute / Dimmer
	Stop		Stop / Hold		[]		Zoom / Size
	Menu		Menu / Home		PIC		Picture / Format
	Exit		Exit / Cancel / Clear		Recall		Fav / Marker / PC
	Info		Info / Angle		1		1
	Up		Up		2		2
	Left		Left		3		3





Original		Replacement		Original		Replacement	
[4]	4	[VIDEO 4]	4				
[5]	5	[TAPE 5]	5				
[6]	6	[TUNER 6]	6				
[7]	7	[AUX - HDD 7]	7				
[8]	8	[USB 8]	8				
[9]	9	[BLUETOOTH 9]	9				
[ENTER]	Enter	[LIST SMART]	Smart / List				
[0]	0	[HDMI - BAT 0]	0				
[--]	--	[GOTO TEXT]	Text / Goto				

