




































 








 























Original	Replacement	Original	Replacement
 Power	 Power	 Tv/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 i	 Info / Angle
 USB/Media 1	 Display / Media	 Sleep	 Sleep / Timer
 USB/Media 1	 Shift + 8	 Source	 AV / Input / RDS
 Play/Pause/Text	 Text / Goto	 Menu	 Menu / Home
 Play/Pause/Text	 Play / Slow	 Left	 Left
 Play/Pause/Text	 Pause / Step / Freeze	 Up	 Up
 Stop/Index	 Stop / Hold	 Right	 Right
 Rec/Media2	 Rec / Rec Mode	 OK	 OK
 Rec/Media2	 Shift + Display / Media	 Down	 Down
 I<</Hold	 I<< / Preset-	 Mouse	 Shift + OK
 >>/Size	 >>/ Preset+	 Smart	 Smart / List
 <</S.Page	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>/Reveal	 >> / Tune+	 CH+	 CH+ / Page+
 I-II/Nicam	 Shift + Picture / Format	 EPG	 Guide / EPG / -/-
 Audio	 Audio / Lang I/II	 VOL+	 Vol+
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-





Original	Replacement
Open/Close	Eject / Surround
Vol-	Vol-
D.Setup	Setup / OPT /
Picture	Picture / Format
D.Menu	D.Menu / Top
Sound	Sound / Title
D.Title	Shift + Sound / Title
P.Size	Zoom / Size
D.Prog	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

