










































 




















 









 












Original	Replacement	Original	Replacement
On/Off	 Power	Return TV	 TV/Radio /
Mute	 Mute / Dimmer	Menu video	 D.Menu / Top
Update	 Play / Slow	Output	 Setup / OPT /
Still	 Pause / Step / Freeze	Text	 Text / Goto
Txt Stop	 Stop / Hold	Input	 AV / Input / RDS
Reveal	 Rec / Rec Mode	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Info	 Info / Angle
Camera1	 I<< / Preset-	Menu Left	 Left
AV 2	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Swap	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	On/Tim	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+




 
































Original	Replacement	Original	Replacement
Volume-	 Vol-	Yellow	 Yellow / YouTube / Repeat
Display	 Display / Media	Blue	 Blue / Prime Video / Random
Chan.Down	 CH- / Page-	Game Coo	 +  Shift + << /
1	 1	Nicam/Mono	 +  Shift + Audio / Lang I/II
2	 2	4.# 16:9	 +  Shift + Picture / Format
3	 3	Bright- Sys	 +  Shift + Setup / OPT / Tools
4	 4	Mix Scan	 +  Shift + Text /
5	 5	TV/AV	 +  Shift + AV / Input / RDS
6	 6	Camera	 +  Shift + Info / Angle
7	 7	Dim Pip	 +  Shift + Left
8	 8	On Pip	 +  Shift + OK
9	 9	Rotate Pip	 +  Shift + Right
Guide -/-- 1.	 Guide / EPG / -/--	Clear	 +  Shift + Exit / Cancel / Clear
0/10	 0	Back	 +  Shift + Back / Return
2.Fav P/C 2.	 Fav / Marker / PC	Audio+	 +  Shift + Vol+
Red	 Red / Netflix / Search	Off/Tim	 +  Shift + Smart / List
Green	 Green / APP / Repeat	Disp	 +  Shift + Display / Media


















 

 
 


Original	Replacement	Original	Replacement
Store Text	 +  Shift + Fav / Marker / PC		



Original	Replacement	Original	Replacement
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Update	 Play / Slow	Menu Up	 Up
Reveal	 Pause / Step / Freeze	Info	 Info / Angle
Txt Stop	 Stop / Hold	Menu Left	 Left
Contrast-	 I<< / Preset-	OK Enter	 OK
Contrast+	 >>I / Preset+	Menu Right	 Right
Color- S.Std	 Sound / Title	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Disp	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media
Bright- Sys	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Replacement	Original	Replacement
2	 2	Store Text	 +  Shift + Fav / Marker / PC
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Bright+ Mode	 +  Shift + Setup / OPT / Tools		
Mix Scan	 +  Shift + Text / Goto		

Goto

