


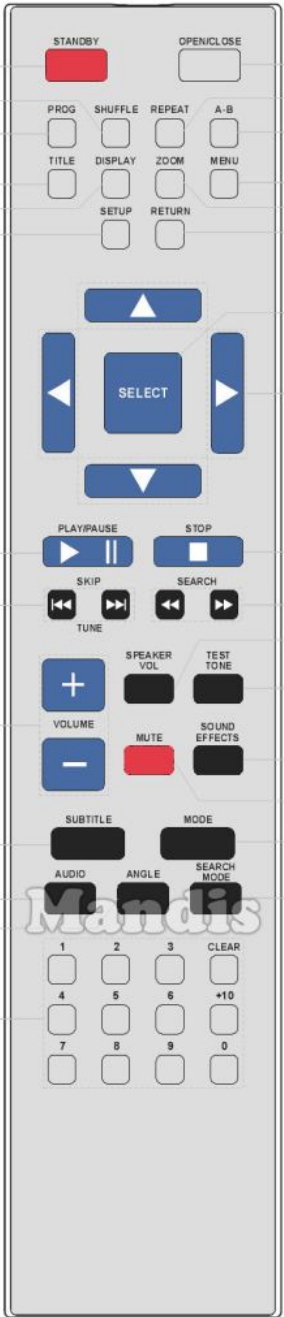

Original	Replacement
Standby	Power
Open / Close	Eject / Surround
Prog	TV/Radio /
Shuffle	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Shift + Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Up	Up
Left / AM	Left
Select	OK
Right / FM	Right
Down	Down

Original	Replacement
Play/Pause	Play / Slow
Stop	Stop / Hold
I<< Skip / Tune-	I<< / Preset-
I<< Skip / Tune-	Shift + I<< / Preset-
Skip >>I / Tune+	>>I / Preset+
Skip >>I / Tune+	Shift + Skip >>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Volume+	Vol+
Speaker	D.Menu / Top
Test Tone	Text / Goto
Volume-	Vol-
Mute	Mute / Dimmer
Sound Effects	Sound / Title
Subtitle	Subtitle / EQ
Mode	Smart / List
Audio	Audio / Lang I/II





Original	Replacement
ANGLE [ANGLE]	ANGLE [INFO] Info / Angle
SEARCH MODE [SEARCH MODE]	[NETFLIX SEARCH] Red / Netflix / Search
1 [1]	[TV 1] 1
2 [2]	[DVD 2] 2
3 [3]	[CD - STB 3] 3
CLEAR [CLEAR]	[CLEAR EXIT CANCEL] Exit / Cancel / Clear
4 [4]	[VIDEO 4] 4
5 [5]	[TAPE 5] 5
6 [6]	[TUNER 6] 6
+10 [+10]	[GUIDE EPG] Guide / EPG / -/--
7 [7]	[AUX - HDD 7] 7
8 [8]	[USB 8] 8
9 [9]	[BLUETOOTH 9] 9
0 [0]	[HDMI - BAT 0] 0

Original	Replacement

